



Smart Security IP Intercom IS710v2 User Manual



ESCENE Communication Co. Ltd

Copyright and Disclaimer

Copyright

Any enterprises or individuals cannot extract, copy and spread in any form of this document without our written permission. In accordance with the law, copying includes translating the document into other languages or converting into other formats. When this document is transmitted in network media, Escene Communication Co., Ltd allows downloading or printing for private use. Any parts of the document are not allowed to be modified or used for commercial purposes. Escene Communication Co., Ltd will not assume any responsibility for the injuries and losses caused by any unauthorized modification or conversion of the document.

Declaration

Information regarding this guide is subject to change without any notice.

This manual provides accurate statement, information and recommendation to the largest extent, but will not guarantee any expresses or implies. Users should take full responsibility for the application of products. Escene Communication Co., Ltd will not make any guarantee for this manual, including but not limited to warranties for implies merchantability and particular purposes. Escene Communication Co., Ltd does not assume any responsibility for indirect or consequential loss caused by the misuse of this manual.

About this manual

Thank you for choosing Smart Security IP Intercom IS710v2. This IP Intercom is specially designed for the user under the public environment with fashionable appearance and complete functions. This manual aims to help you quickly use Smart Security IP Intercom IS710v2. Before use, please read the packing list and safety notes section of this manual, communicate with the system administrator to confirm if the current network environment can meet the requirements of configuring the Intercom. If this is your first time to use Smart Security IP Intercom IS710v2, we recommend that you should read the quick installation guide and product technical manual. The document can be downloaded from the following website: <http://www.escene.cn/en>.

Summary

Copyright and Disclaimer.....	2
Summary.....	3
1. Getting Started.....	4
1.1 Outline.....	4
1.2 Product Features.....	4
1.3 Technical Information.....	4
2. Intercom Installation.....	6
2.1 Embedded.....	6
2.2 Equipment installation.....	7
3. Configuration of IP intercom.....	8
3.1 Remote WEB Management.....	8
3.2 Network.....	9
3.2.1 LAN Setting.....	10
3.3 SIP Account.....	11
3.4 Programmable keys.....	13
3.5 Voice.....	13
3.6 Phone Book.....	15
3.7 Advanced Setting.....	15
3.7.1 Intercom Setting.....	15
3.7.2 VLAN Setting.....	16
3.7.3 VPN Setting.....	16
3.8 Maintenance.....	16
3.8.1 Log.....	17
3.8.2 Password.....	17
3.8.3 Factory reset.....	18
3.8.4 Auto Provision.....	18
3.8.5 TR069 Upgrade.....	19
3.8.6 FTP Upgrade.....	20
3.8.8 TFTP Upgrade.....	21
3.8.9 HTTP Upgrade.....	21
3.8.10 Reboot.....	22
3.9 Intercom Status.....	22
3.10 System Info.....	23
3.11 Language.....	24
4. Brief pictures for application environment.....	24
4.1 Door security system application.....	24
4.2 Fire protection system application.....	25

1. Getting Started

1.1 Outline

ESCENE security intercom series IP Intercom IS710(V2) is well developed according to customers requirements based on VOIP Phone. It has Fashion classic aluminum wire drawing surface shell with the design of waterproof, dustproof, anti-dismantle. The traits of strong compatibility and supporting extra access swiping card device make it perfectly to be used in bank, subway, power plant, mine, prison, steel companies and so on. It is the best choice and highly cost effective for customers' projects requirements in this industry.

1.2 Product Features

- One key to dial emergency call for help, realize the bi-directional full-duplex voice intercom.
- Panel adopts advanced wire drawing aluminum alloy material, high strength damage resistant button, strong and durable.
- Support POE power supply and the external power supply.
- Embedded wall or mounted in the wall, to avoid cable leakage users, to ensure that the internal network information security, provide and remote configuration.
- Built-in speaker and high sensitive microphone, support hand-free calls and receive emergency broadcast
- Adopted seal design, waterproof and dustproof level is IP65.
- Support extra access security device, multi-functions provide more perfect service to industry customers.



1.3 Technical Information

Intercom features

WEB support Multi-Language ;1 SIP account, Hotline;Call hold, Call waiting, Call forward;Call transfer (blind/busy/ask);Mute, DND;Auto-answer, 3-way conferencing;1 DSS programmable key(Speed dial, Intercom etc.);Volume control;Direct IP call without SIP proxy;Default Ring tone 1 selection/import/delete;Custom Warning Ring tone 2 selection/import/delete;Time setting(SNTP/SIP Server/Manual);Support SIP main/standby server;

Network parameters

SIP v1 (RFC2543), v2 (RFC3261);DNS SRV (RFC3263);NAT Traversal: STUN mode;DTMF: In-Band, RFC2833, SIP Info, Auto;HTTP/HTTPS Web Management;IP Assignment: Static/DHCP/PPPoE;Network support Bridge mode;
TFTP/DHCP/PPPoE client;DNS client, NAT/DHCP server;

Security

LLDP, VLAN QoS (802.1pq),VPN(L2TP);Transport Layer Security (TLS);Digest authentication using MD5/MD5-sess;Secure configuration file via AES encryption;Phone lock for personal privacy protection;Admin/User 2-level configuration mode;

Voice features

Wideband Codec: G.722;Narrowband codec: G.711μ/A, G.723.1;G.726, G.729a/b, iLBC;VAD, CNG, AEC, AGC;Full-duplex;

Physical properties

1 DSS programmable key(Speed dial, Intercom etc.);1 LED lights;1 light touch button(Remote factory value);1xRJ45 10/100M Ethernet ports;Power adapter: AC 100~240V input and;DC 12V/1A output;Power over Ethernet ,IEEE 802.3af,class 0;Net weight: 0.52KG, Gross weight: 0.65KG;

Each motherboard port, check the picture illustration below "Mother Broad Interface".

Carton packaging


The whole Size: 162*112*40mm

Product Certification



Platform Compatibility Test (non-certificate)

ZTE/Alcatel-Lucent/Asterisk/Broadsoft/Metaswitch/Yeastar/Avaya/3CX/Elastix/HUAWEI etc.

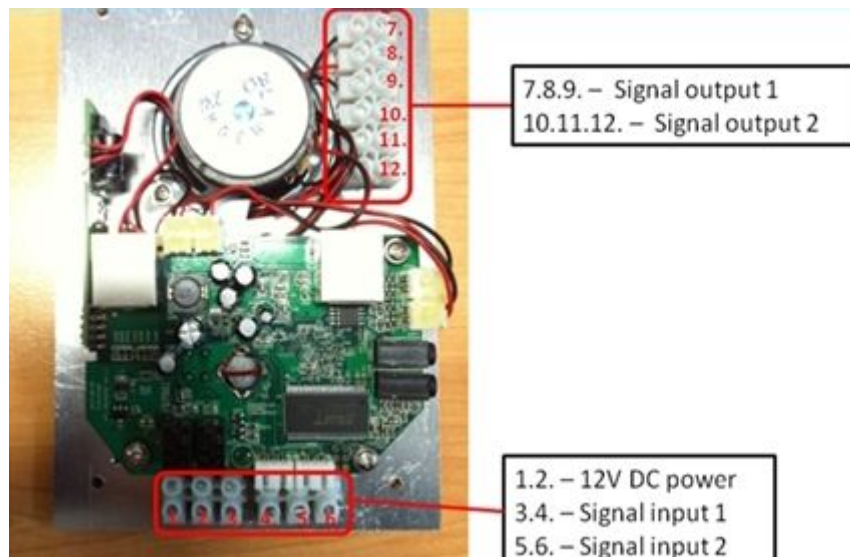

Mother Broad Interface

*This data is for information purposes only and is subject to change without notice.

2. Intercom Installation

Generally system administrator will connect your new IS710v2 IP Intercom to company LAN network. If not, please refer to below illustration.


Open IS710v2 packing box, according to the packing list, check the related attachment to make sure to no omitting. Packing list as follows.


- IS710v2 Intercom
- Quick operating guide
- 8*Screws
- 2*Rubbers

IS710v2 could be installed to internet according to the below steps.

2.1 Embedded


If the product is used for embedding, then the cutting of embedded need to be a little bigger than the installing hole of standard dimension 168*116*42mm .(42mm means the extra aluminum housing thickness.),as follows. Notice: the embedded value is up to the actual situation.

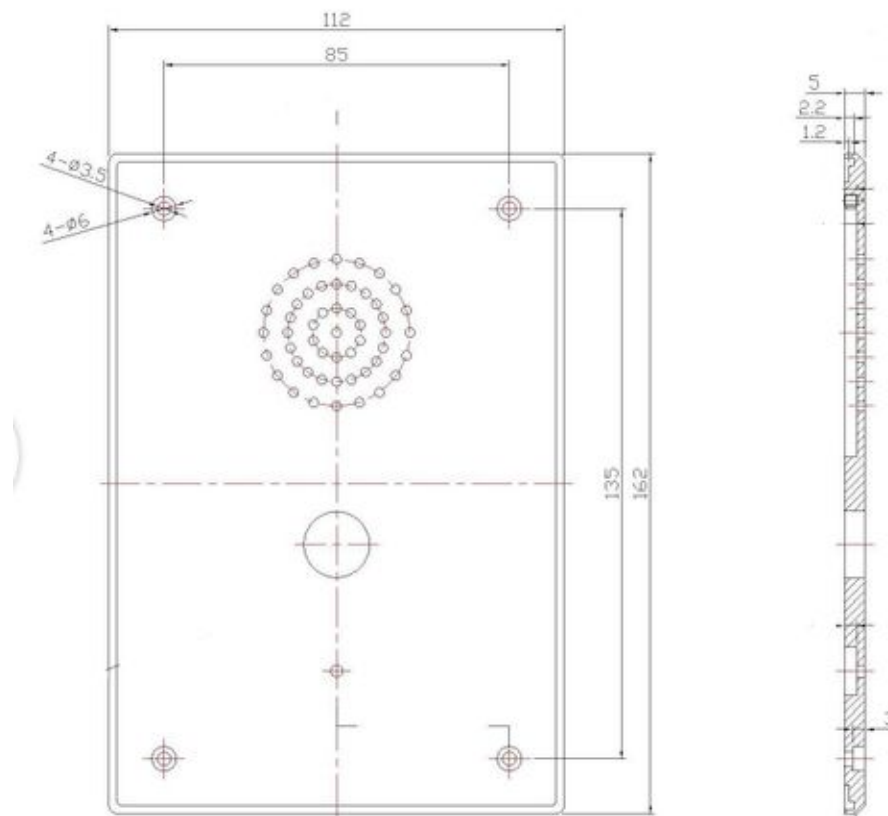

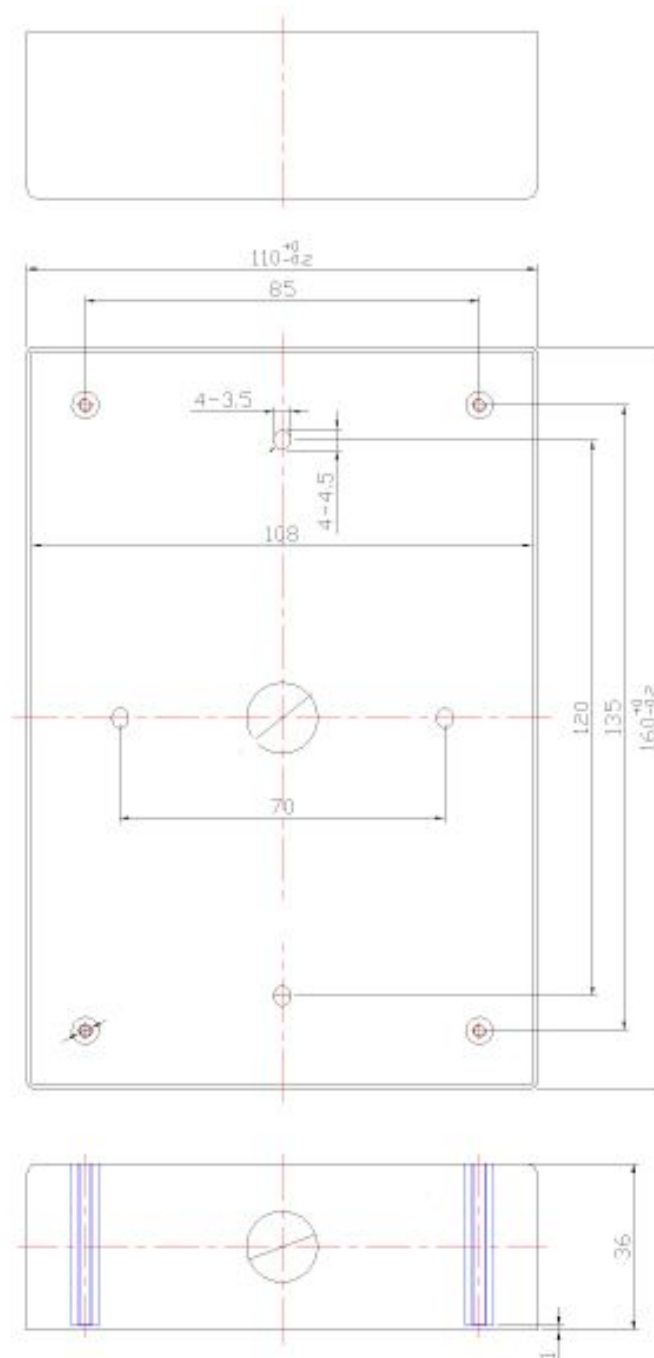

2.2 Equipment installation

- 1、Open the aluminum housing.
- 2、Put the IP intercom into it according to the cutting embedded specification. After that, fix four M3*12 screws on the wall with the screw driver.

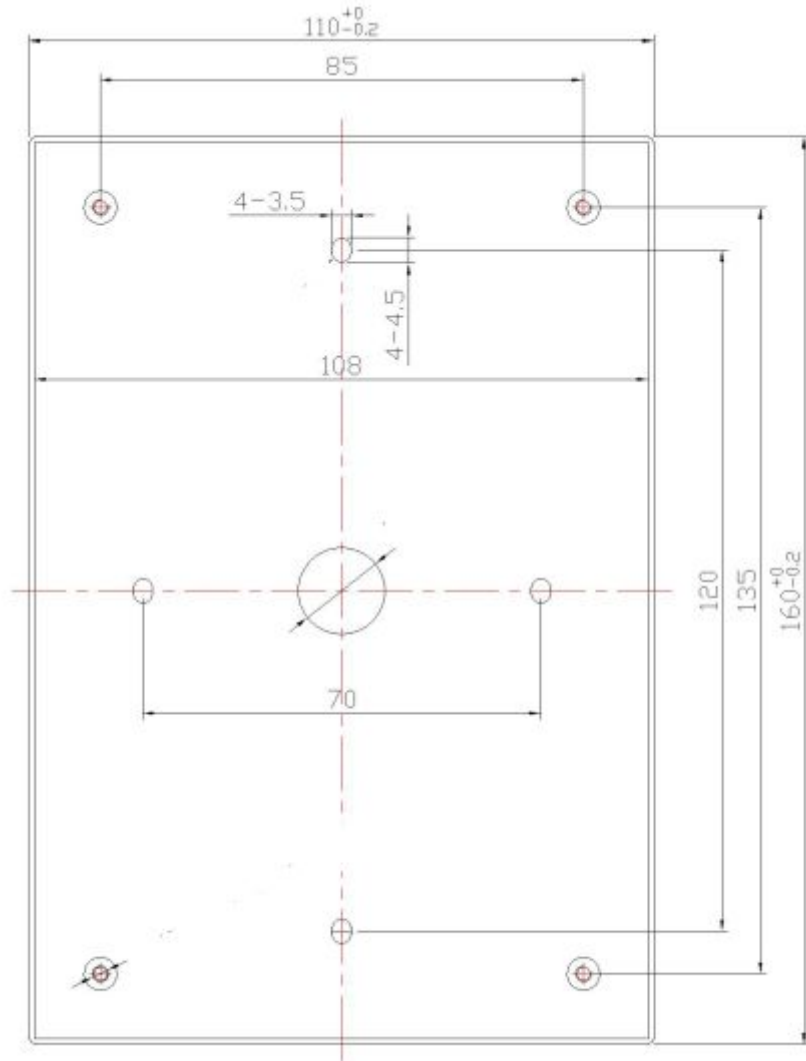

3、After installing inter housing, well-set the related wiring and replace the aluminum housing. Power on and start testing.


3. Configuration of IP intercom

You need to know the IP address of IP Intercom before starting setting. You could learn how to get IP address below. Default IP address is 192.168.1.153.in static status. If getting from DHCP, you need to search the related IP address by the third software scanning equipment MAC. (Getting IP by DHCP is not suggested.)

3.1 Remote WEB Management

Once input the IP address of intercom on the web browser and tap the “enter” on the keyboard. Then a login screen will pop up from the intercom equipment. You need to input user name and password. Both default user name and password of system is case letters

“root”

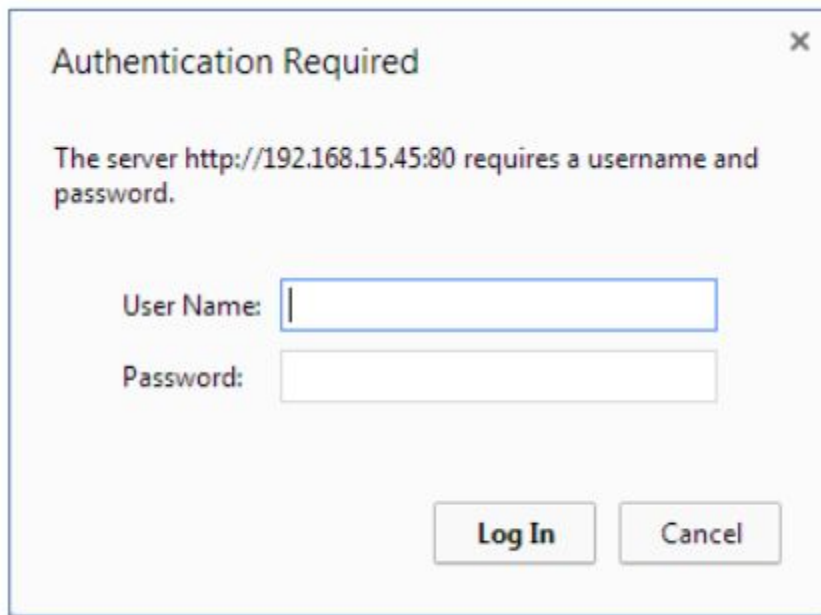A dialog box titled "Authentication Required" with a close button (X) in the top right corner. The text inside says "The server http://192.168.15.45:80 requires a username and password." Below this text are two input fields: "User Name:" and "Password:". At the bottom of the dialog are two buttons: "Log In" and "Cancel".

After the log-in, the administrate web page of the intercom will pop up.



The setting and parameter of each option will be described as follow.

3.2 Network

This option is used for the network setting, please notice that you could set the LAN and VPN.

3.2.1 LAN Setting

This option is used for setting speaker IP, as shown below.

LAN Port

IP settings
☐ DHCP
 Hostname(Option 12):
 Manufacturer(Option 60):
☒ Static IP
 IP Address:
 Netmask:
 Gateway:
☐ PPPoE
 Username:
 Password:
 MTU: Default: 1500

DNS Settings
☐ Automatic
☒ Manual DNS
 Primary DNS:
 Secondary DNS:

MAC Address
 MAC Address: 00:26:8b:ac:03:f1

Port Management Settings
 HTTP Port:
 Telnet Port:

Socket5 Proxy Server
 Socket5 Proxy Server: ☒ off ☐ on
 Server IP: *
 Port: *

Anonymous Login:	<input checked="" type="checkbox"/>
Username:	<input type="text"/>
Password:	<input type="password"/>
Paging Setting	
Paging 1:	<input checked="" type="radio"/> off <input type="radio"/> on
Group IP:	<input type="text"/>
Port:	<input type="text" value="10000"/>
Paging 2:	<input checked="" type="radio"/> off <input type="radio"/> on
Group IP:	<input type="text"/>
Port:	<input type="text" value="10000"/>
Paging 3:	<input checked="" type="radio"/> off <input type="radio"/> on
Group IP:	<input type="text"/>
Port:	<input type="text" value="10000"/>
Paging 4:	<input checked="" type="radio"/> off <input type="radio"/> on
Group IP:	<input type="text"/>
Port:	<input type="text" value="10000"/>
Paging 5:	<input checked="" type="radio"/> off <input type="radio"/> on
Group IP:	<input type="text"/>
Port:	<input type="text" value="10000"/>
<p>Please Note: Changing the default HTTP Port (80) will require using the new port number to access the IP phone web interface. Please note that changes require a reboot. Use the following format when not using the default HTTP (http://ip address:portnumner).</p>	
<input type="button" value="Submit"/>	

3.3 SIP Account

ESCENE IP Intercom can be set up one SIP account. Account's user name, password and server address are mandatory. If all the information filled is valid and correct, then register will be launched from SIP server after submitting and saving.

Account1

SIP Settings

Enable: ☒

Account Mode:

Display Name:

Username: *

Authenticate Name:

Password: *

Label:

SIP Server:

Secondary server:

OutboundProxy Server:

Secondary OutboundProxy Server:

Polling Interval Time Of Registration: s Default Value: 32s, Range: 20s~60s

NAT Traversal:

STUN Server:

BLA: ☒ off ☐ on

BLA Number:

Call Method: ☒ SIP ☐ TEL

Subscribe Period: Default: 1800s, Min: 120s

Register Expire Time: Default: 3600s, Min: 40s

DNS-SRV: ☒ off ☐ on

SIP Transport: ☒ UDP ☐ TCP ☐ TLS

Call

Amount Of Line Account Used: (Default: 2)

Do Not Disturb: ☒ off ☐ on

Anonymous Call:	<input checked="" type="radio"/> off <input type="radio"/> on
Anonymous Call Rejection:	<input checked="" type="radio"/> off <input type="radio"/> on
Use Session Timer:	<input checked="" type="radio"/> off <input type="radio"/> on
Session Timer:	<input type="text" value="300"/> (min:30s)
Refresher:	<input type="text" value="UAS"/> ▼
Allow-events:	<input checked="" type="radio"/> off <input type="radio"/> on
Registered NAT:	<input type="radio"/> off <input checked="" type="radio"/> on
Ring Type:	<input type="text" value="None"/> ▼
UDP Keep-alive Message:	<input checked="" type="radio"/> off <input type="radio"/> on
UDP Keep-alive Interval:	<input type="text" value="30"/> (15-60s)
Security	
SIP Encryption:	<input checked="" type="radio"/> off <input type="radio"/> on
RTP Encryption:	<input checked="" type="radio"/> off <input type="radio"/> on
Encryption Algorithm:	<input type="text" value="RC4"/> ▼
Encryption Key:	<input type="text"/>
<input type="button" value="Submit"/>	

3.4 Programmable keys

This function is reserved for the future.

3.5 Voice

You can manage the speaker volume ranks and microphones which showed in the following table. Please note that in most cases, if you open the microphone and switch to level 7, then don't use speaker volume more than level 4, unless you can ensure that your coverage is small or noise reduction level is high.

Audio	
Tone	
Select Country: United States	Ring Volume(0~9): 3
Begin Time: 20 Hour - 8 Hour	Ring Volume in Night(0~9): 3
Output Volume (1~9)	Input Volume(1~7)
Handset Volume: 5	Handset Mic Volume: 3
SpeakerPhone Volume: 5	SpeakerPhone Mic Volume: 3
Headset volume: 5	Headset Mic Volume: 3
Voice Codec	
Payload Length: 20 ms	High Rate of G723.1: <input checked="" type="checkbox"/>
Jitter Buffer	
Type: <input checked="" type="radio"/> Adaptive <input type="radio"/> Fixed	
Min Delay: 60	Max Delay: 500
Other	
VAD: <input type="checkbox"/>	Echo Suppression Mode: <input type="checkbox"/>
SideTone: <input type="checkbox"/>	
Ring	
Ring Type: Ring1	Delete
Ring Type2: Ring1	
Uploading Ring	
Tone	
<input type="text"/> Browse... Upload Cancel	
(Please upload a ring tone with G711A audio coding. Maximum 10 rings and the total sizes must less than 150k.)	
Audio Codecs:	
enableCode	<div> <div>Up</div> <div>Down</div> </div> <div> G722 G711A G711U G729A G723 </div> <div> << >> </div> <div> iLBC G726_32 </div> <div>disableCode</div>
Submit	

3.6 Phone Book

This function is reserved for the future.

3.7 Advanced Setting


In advanced configuration, system parameters are the main points, other options, such as web dial-up, dialing rules, IP filtering strategy, ring tones, certificate management and global server, etc., most are reserved function which could be ignored.

3.7.1 Intercom Setting

System parameters can be configured IP Intercom's basic configuration, PSTN Settings (reserved), QoS, call related, VoIP call forward, time Settings, and others. The commonly used functions in the option below are mainly introduced. Other functions do not be arbitrarily changed.

3.7.1.1 Switch signal output


Switch signal output 1 ~ 2 which can be controlled by multiple variables, the monitoring server message control is define variable which can coordinate and adjust to be compatible with the special requirements of some particular platform.

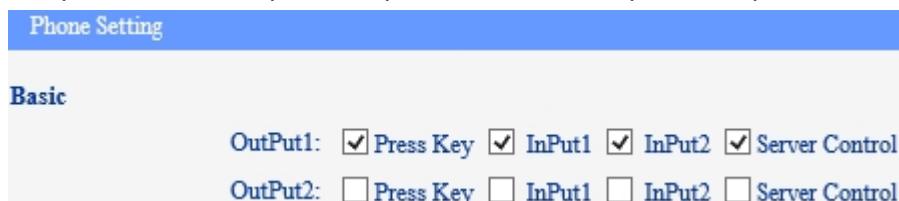

Phone Setting					
Basic					
OutPut1:	<input checked="" type="checkbox"/> Press Key	<input checked="" type="checkbox"/> InPut1	<input checked="" type="checkbox"/> InPut2	<input checked="" type="checkbox"/> Server Control	
OutPut2:	<input type="checkbox"/> Press Key	<input type="checkbox"/> InPut1	<input type="checkbox"/> InPut2	<input type="checkbox"/> Server Control	

3.7.1.2 Hot Line

 Hotline function is the goal of emergency button on the panel paging, default to hotline immediately. Of course, it can be sent by different ways according to different environment.



Hot Line Function: ☐ off ☒ Immediately Hot Line ☐ Delay s (5-30)

Hot Number:


3.7.1.3 Time Setting

IP Intercom's time access can be SNTP, manual setting and update at the SIP server below, PSTN is reserved options.

Set Time Mode: ☐ SNTP ☒ SIP Server ☐ PSTN ☐ Manual

3.7.2 VLAN Setting

When IP Intercom's application environment involves the VLAN, the below operating will guide you how to use.

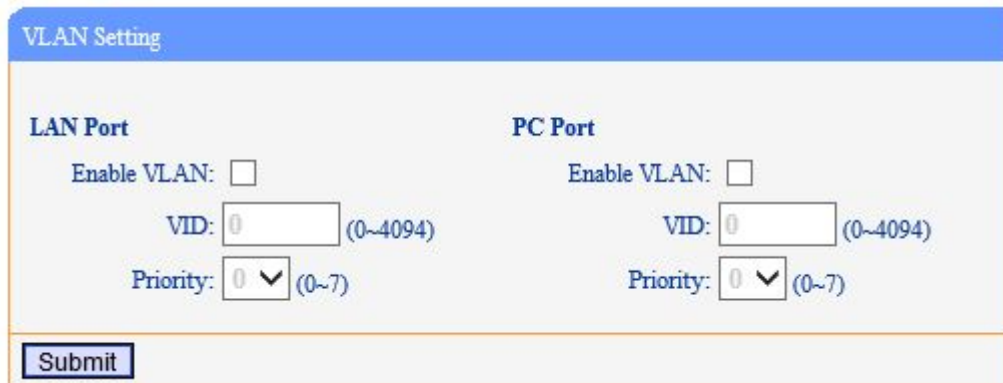

The VLAN Setting interface is divided into two main sections: LAN Port and PC Port. Each section contains an 'Enable VLAN' checkbox, a 'VID' input field (ranging from 0 to 4094), and a 'Priority' dropdown menu (ranging from 0 to 7). A 'Submit' button is located at the bottom left of the form.

3.7.3 VPN Setting

When IP Intercom's application environment involves the VPN, the below operating will guide you how to use.



The VPN Setting interface includes an 'Enable VPN' checkbox and a 'VPN Type' dropdown menu (set to L2TP). Under the 'L2TP' section, there are input fields for 'VPN Server Addr.', 'VPN User Name', and 'VPN Password'. The 'OPEN VPN' section features a red warning message: 'Attention: The trusted certs dir is /mnt/sip/vpn/'. Below this, there is an 'Upload VPN Config' input field, a 'Browse...' button, and an 'upload' button. A 'Submit' button is located at the bottom left of the form.

3.8 Maintenance

This part mainly introduces some maintenance method. According to the below, you can

reconfigure Intercom IP Phone or view Intercom IP Phone log to gain more information about maintenance.

3.8.1 Log

For most famous systems, log document will offer the record born by behavior change of Intercom IP Phone. Log document information contains the question you need to investigate. It can upload log document to the appointed Server as you need to gain information from it.

The screenshot shows a web interface titled "Log" with a blue header. It contains several configuration options: radio buttons for "No Record", "Call:" (selected), "SIP", and "LCD"; a dropdown menu for "Error Level"; a "Log send to server:" section with "off" (selected) and "on" radio buttons; a "Log Server Address:" section with a text input field and a port input field containing "514"; a "Capture Packet:" section with "Start", "End", and "Download" buttons; and a "Submit" button at the bottom.

3.8.2 Password

If you need to change the default password of Intercom IP Phone, so you need to configure password information. Please note that password modification to ensure safety rather than distribute to anyone, unless they allows you to interact with the Intercom IP Phone.

The screenshot shows a web interface titled "Password" with a blue header. It contains fields for "Username:" (containing "root"), "Old Password:", "New Password:", and "Confirm Password:". Below these fields are radio buttons for "Administrator" (selected) and "User". A "Submit" button is located at the bottom.

3.8.3 Factory reset

The following will direct you how to reset the factory default. Please note that factory reset will erase all original configuration information, so be cautious to use this function. IP address will recover to be default: 192.168.1.153.



3.8.4 Auto Provision

Intercom IP Phone's automatic update feature is that it automatically read related configuration files from the server, thus to replace manual update operations. The following will illustrate related operations, such as the server name or address, verify the user name and password (optional), inspection cycle, reboot detection, etc.

Auto Provision

Auto Provision: ☒ on ☐ off

Option: (Default :66, Min:1, Max:254)

Protocol:

Software Server URL:

Username:

Password:

☒ Auto Download Software

☒ Auto Download Kernel

☒ Auto Download Config File

☐ Broadsoft Compatiblity

☒ Auto Download Expansion

☒ Auto Download Enterprise Phonebook

☒ Auto Download Personal Phonebook

☒ Booting Checked

Disable the phone while booting checking: ☒ off ☐ on

Auto Provision Frequency: Hour (Default :7 days, Max:30 days)

Auto Provision Time:

Auto Provision Next Time: Thu Apr 10 20:28:59 2014

AES Enable: ☒ off ☐ on

AES Key:

3.8.5 TR069 Upgrade

This function will cooperate with telecom IMS platform to use. Please follow below.

TR069

☐ Cwmp Enable

Protocol: **HTTPS** ▼

Cwmp Host URL:

Cwmp Port:

Serial Number: 00100400YJ012050000000268bac03f1

Username:

Password:

Password

New Password:

Confirm Password:

3.8.6 FTP Upgrade

The following will direct you when you use FTP to upgrade.

FTP Upgrade (Attention: Do not cut off the electricity when Upgrade!!)

Server IP:

Filename:

Username:

Password:

Software Upgrade:

Kernel Upgrade:

Note: It's no necessary to input filename when backup.

Configuration:

Phone Book:

EXT Module:

3.8.8 TFTP Upgrade

The following will direct you when you use TFTP to upgrade.

TFTP Upgrade (Attention: Do not cut off the electricity when Upgrade!!)

Server IP:

Filename:

Software Upgrade:

Kernel Upgrade:

Note: It's no necessary to input filename when backup.

Configuration:

Phone Book:

EXT Module:

3.8.9 HTTP Upgrade

The following will direct you when you use HTTP to upgrade.

HTTP Upgrade (Attention: Do not cut off the electricity when Upgrade!!)

HTTP Upgrade:

Select a File:

Software Upgrade:

Kernel Upgrade:

Configuration:

XML PhoneBook:

Vcard:

EXT Module:

Log:

All Config File:

3.8.10 Reboot

The following will direct you if rebooting Intercom. Please note that do not reboot unless hooking or no reaction situations which is rare occurrence.

Reboot

Attention: When click this button this equipment will be reboot, web service will be interred, please connect again.

3.9 Intercom Status

The following will direct you information of system operation working time, account registration status and network setting

Phone Status	
System Run Time	0 Day0 Hour25 Minute46 Second
Register status	
Account1:	None
Network Status	
LAN Connection:	Static
LAN IP Address:	192.168.1.153
Netmask:	255.255.255.0
Gateway:	192.168.1.1
Primary DNS:	192.168.0.1
Secondary DNS:	0.0.0.0
VPN IP Address:	
PC IP Address:	
PC Netmask:	
Device Type:	Bridge
DHCP Server:	off
Hardware	
Hardware ID:	1
<input type="button" value="Refresh"/>	


3.10 System Info

The following will direct you equipment name, software/hardware version No, kernel version No. and related server address.

System Info
Phone Model: IS710
Software Version: V3.0.0.0-4788
Hardware Version: V2.x.x
Kernel Version: V2.6.1
AutoProvision Server URL: voip.autoprovision.com
TFTP Server IP: voip.autoprovision.com
<input type="button" value="Refresh"/>

3.11 Language


The following will direct you how you to change language with the intercom.

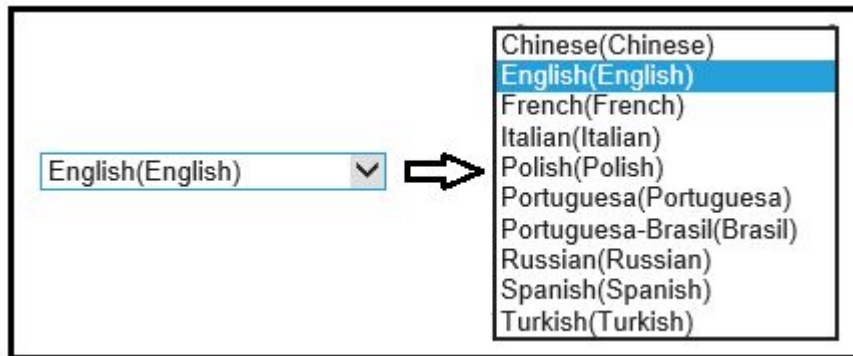

4. Brief pictures for application environment

The following pictures introduce the practical application of IP intercom. Take door security and fire protection for example. More compatibility application is subject to actual test.

4.1 Door security system application

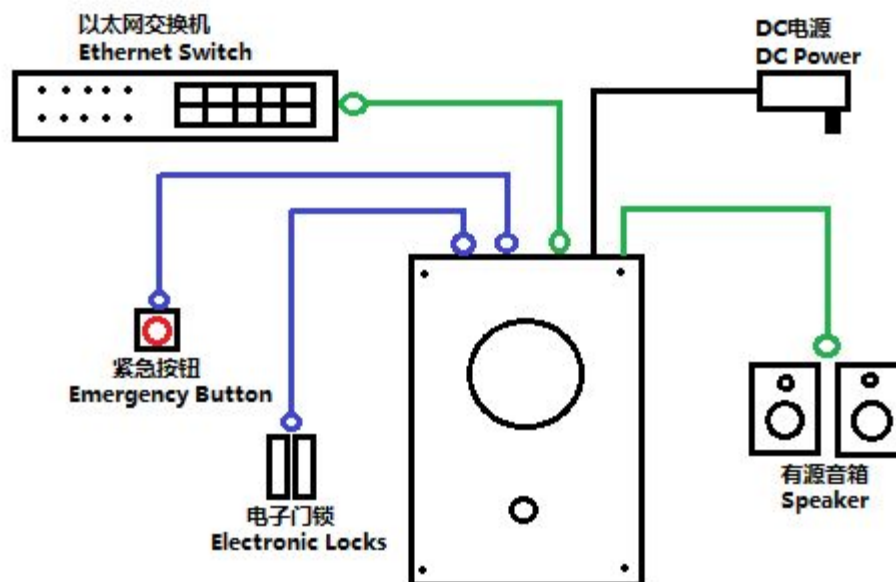

4.2 Fire protection system application

